

TITLE

# E12 CENTRAL LOCKING SYSTEM

DRAWN BY


PETER FLORANCE

DATE

12/16/01

REVISED

2/26/02

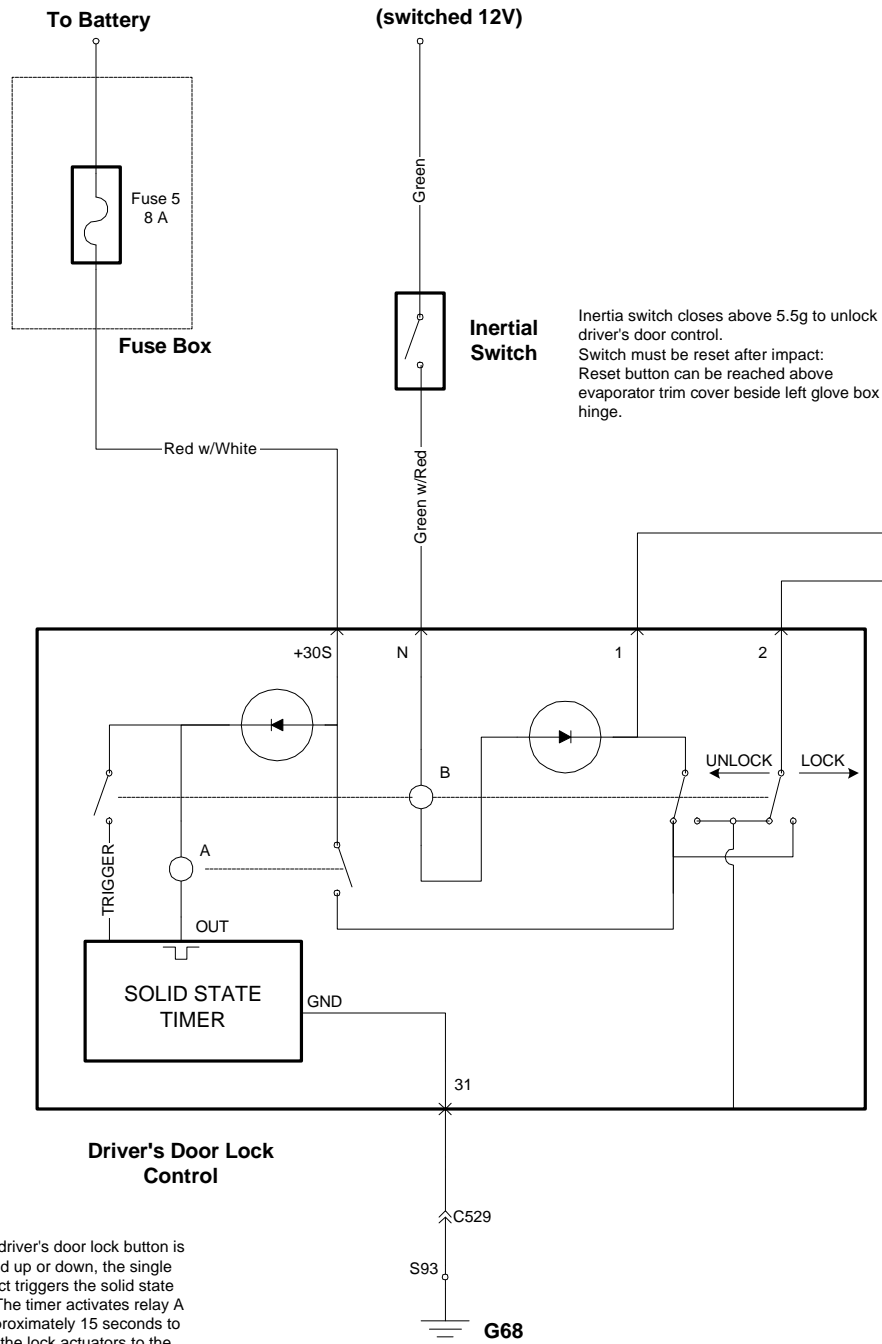

**Inertial Switch**

Inertia switch closes above 5.5g to unlock driver's door control. Switch must be reset after impact. Reset button can be reached above evaporator trim cover beside left glove box hinge.


**Driver's Door Lock Control**

As the driver's door lock button is moved up or down, the single contact triggers the solid state timer. The timer activates relay A for approximately 15 seconds to drive the lock actuators to the required position

C529  
S93

**G68**

G68 is located on metal dash frame below instrument cluster above pedals

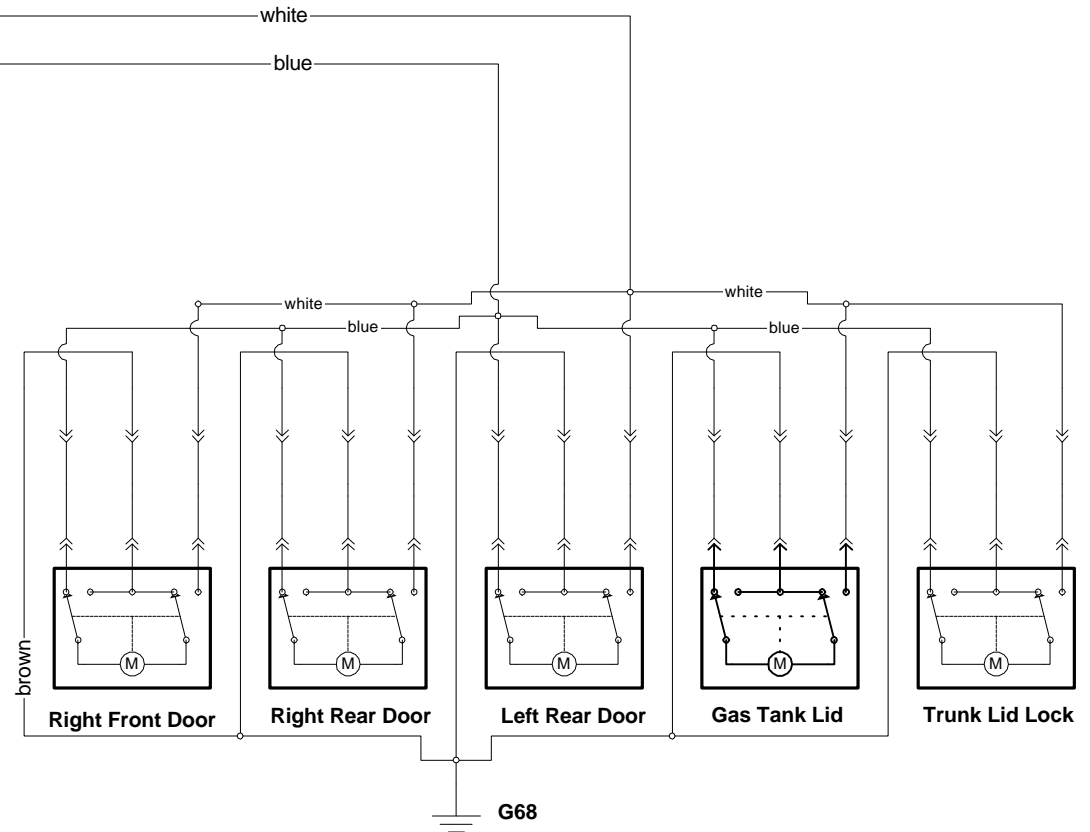

**G68**

G68 is located on metal dash frame below instrument cluster above pedals